


7X Ø.166 MATCHDRILL  
SEATBASE TO  
COMPARTMENT INSERT

→ FWD

**COMPARTMENT INSERT  
MATCH DRILLING**

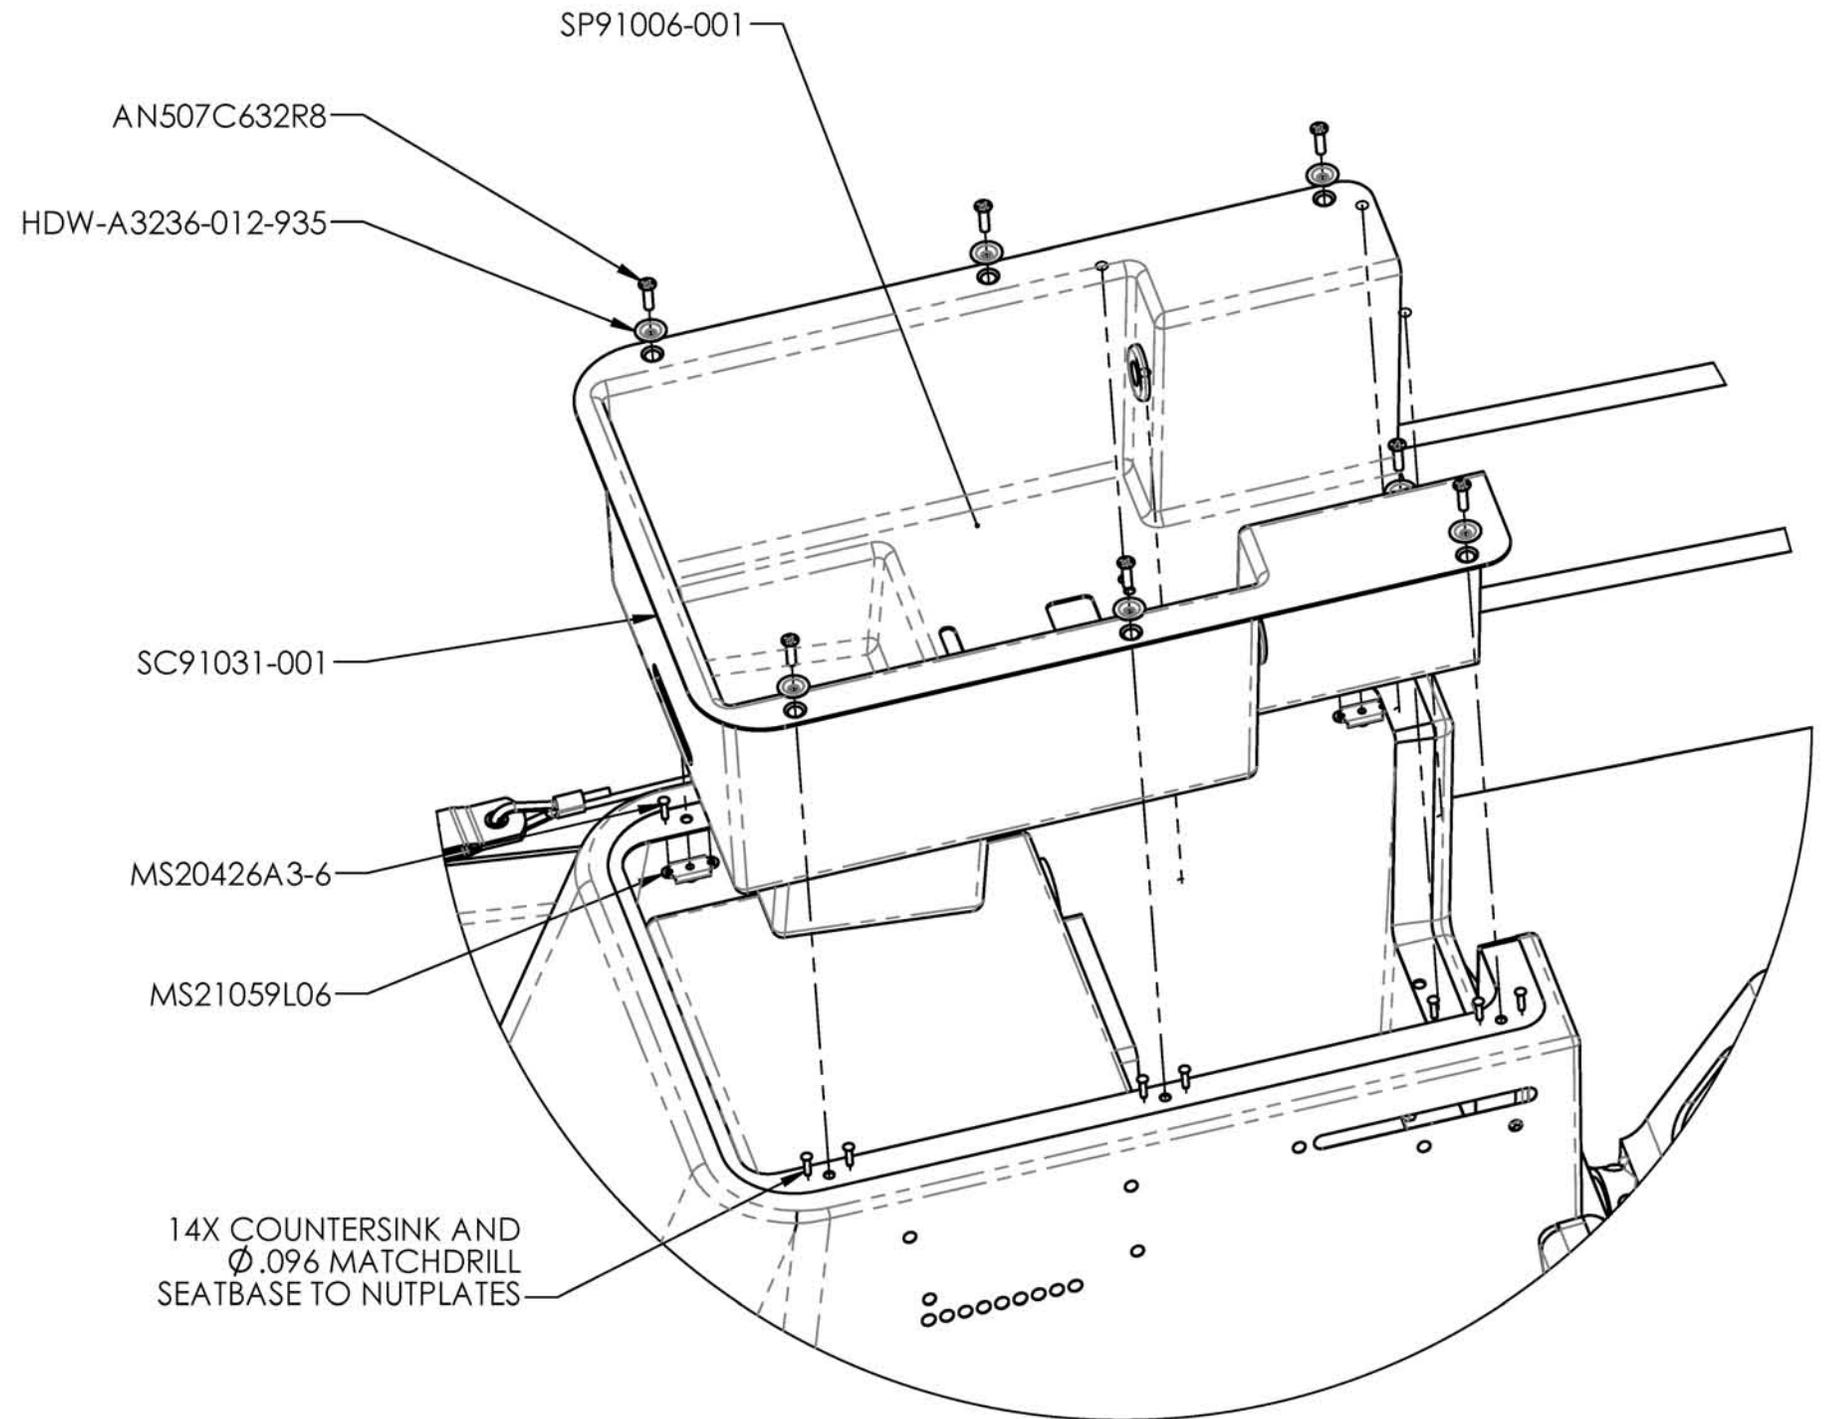

AN507C632R8  
HDW-A3236-012-935

SP91006-001

SC91031-001

MS20426A3-6

MS21059L06

14X COUNTERSINK AND  
Ø.096 MATCHDRILL  
SEATBASE TO NUTPLATES

**BATTERY BOX INSTALLATION**