
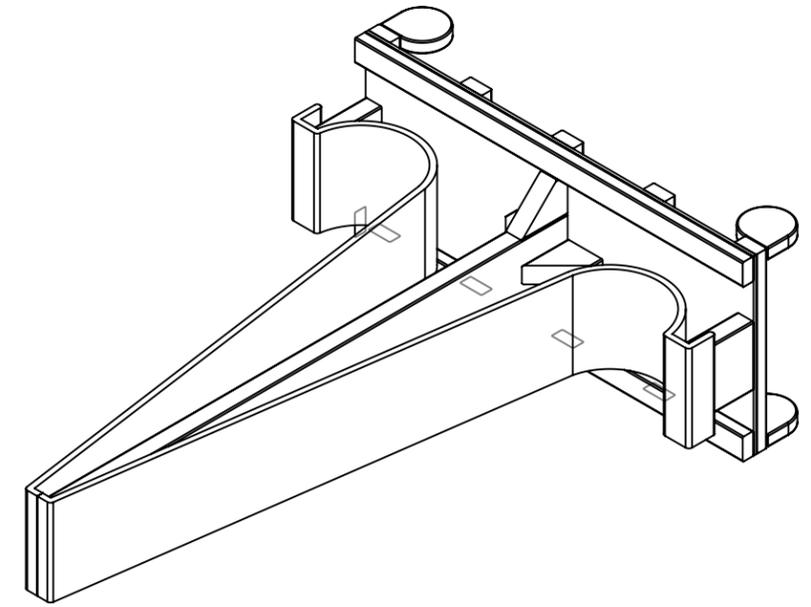


**Standard Automotive Creeper**

**1/2" Thick Carpet**

**2" X 6"**

**2" X 6"**

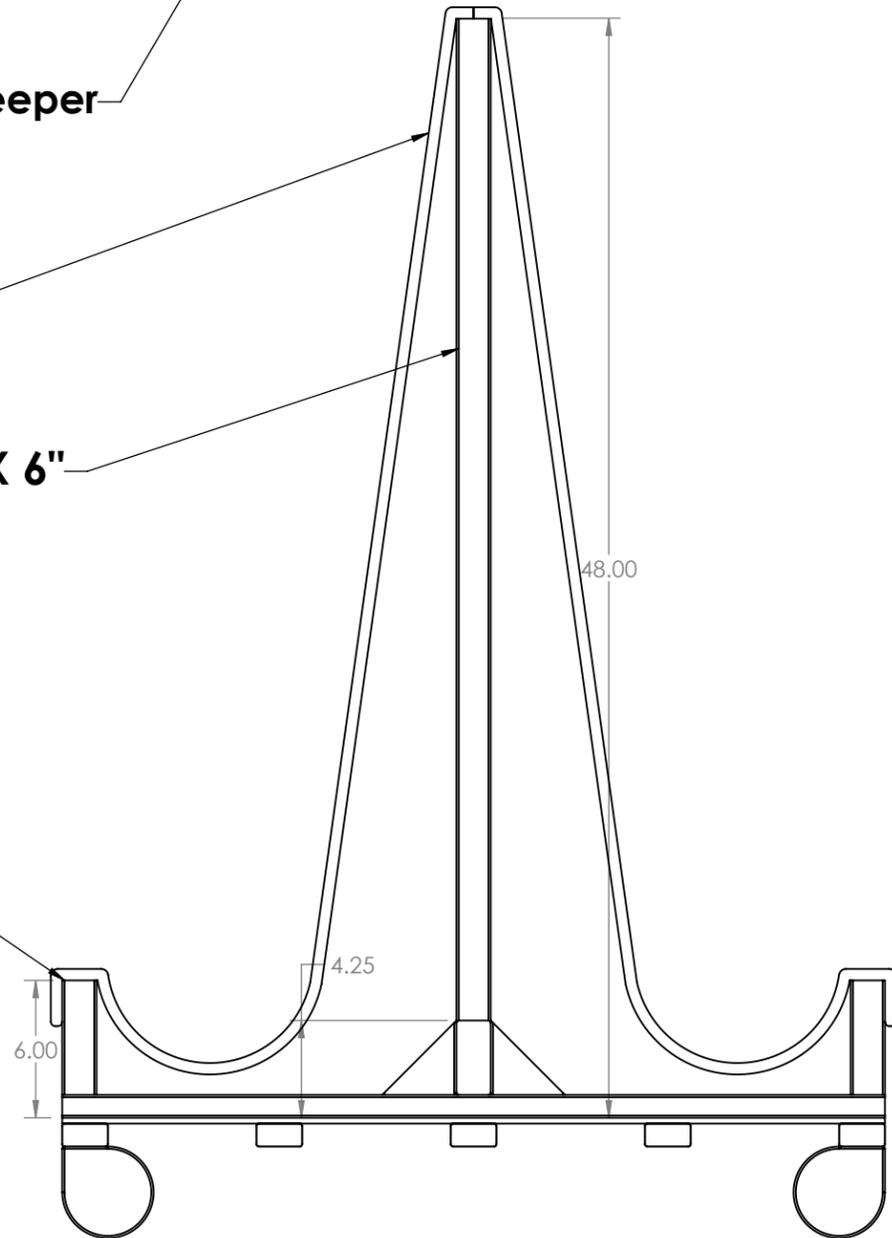

**WING Rack**

**Use wood screws to assemble Loop carpet over each 2" X 6" and three screws to hold carpet to 2" X 6".  
Leave a loop in the carpet that allows the wing leading edge to be 2" from the creeper.**